

SAMSUNG

WASHING MACHINE DRUM TYPE

Basic Model :	WF45R6100AP/US (WF6000R)	
Model Name :	WF45R6100AP WF45R6100AC WF45R6300AW WF45R6300AC WF22R6270AV WF22R6270AP (WF6000R)	WF45R6100AW WF45R6300AP WF45R6300AV WF45T6000AW WF22R6270AC WF22R6270AW
Model Code :	WF45R6100AP/US WF45R6100AC/US WF45R6300AW/US WF45R6300AC/US WF22R6270AC/AX WF22R6270AP/AP WF22R6270AP/CO WF22R6270AW/AP WF22R6270AW/AC WF22R6270AWCXD (WF6000R)	WF45R6100AW/US WF45R6300AP/US WF45R6300AV/US WF45T6000AW/A5 WF22R6270AC/CO WF22R6270AP/AX WF22R6270AV/AX WF22R6270AW/AX WF22R6270APCXD WF20T6000AWCXD

SERVICE *Manual*

CUSTOMER REPAIR GUIDE

WASHING MACHINE (DRUM)



CONTENTS

1. Safety Instructions
2. Features and Specification
3. Disassembly and Reassembly
4. Troubleshooting

Disclaimer:

This manual contains confidential and proprietary information of Samsung Electronics Co., Ltd. ("Samsung")

All text, graphics, user interfaces, visual interfaces, photographs, trademarks, and logos (collectively, "Content"), including but not limited to the design, structure, selection, coordination, "look and feel" and arrangement of such Content, contained in this manual is owned, controlled or licensed by or to Samsung, and is protected by trade dress, copyright, patent and trademark laws, and various other intellectual property rights and unfair competition laws.

No part of this manual or the Content may be copied, reproduced, republished, uploaded, posted, publicly displayed, encoded, translated, transmitted or distributed in any way (including "mirroring") to anyone, any entity, any other computer, server, Web site or other medium for publication or distribution or for any commercial purpose, without Samsung's express priorwritten consent.

Samsung reserves the right, at its sole discretion, to change, modify, add or remove portions of any part of this manual at any time. It is your responsibility to check the manual periodically for changes. Your use of the manual will mean that you accept and agree to this disclaimer. If you do not agree with any part of this disclaimer, please stop using this manual immediately.

1. SAFETY INSTRUCTIONS

1-1. SAFETY INSTRUCTIONS FOR SERVICE ENGINEERS

- ▶ Be sure to observe the following instructions to operate the product correctly and safely to prevent possible accidents and hazards while servicing.
- ▶ Two types of safety symbols, Warning and Caution, are used in the safety instructions.



WARNING

Hazards or unsafe practices that may result in severe personal injury or death.



CAUTION

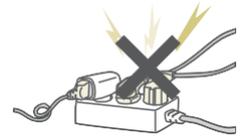
Hazards or unsafe practices that may result in minor personal injury or property damage.



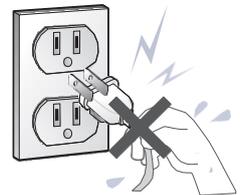
WARNING

BEFORE SERVICING

- (When servicing electrical parts or harnesses) Make sure to disconnect the power plug before servicing.
 - ✓ Failing to do so may result in a risk of electric shock.
- Do not allow consumers to connect several appliances to a single power outlet at the same time.
 - ✓ There is a risk of fire due to overheating.



- When removing the power cord, make sure to hold the power plug when pulling the plug from the outlet.
 - ✓ Failing to do so may damage the plug and result in fire or electric shock.



- When the washing machine is not being used, make sure to disconnect the power plug from the power outlet.
 - ✓ Failing to do so may result in electric shock or fire due to lightning.



- Do not place or use gasoline, thinners, alcohol, or other flammable or explosive substances near the washing machine.
 - ✓ There is a risk of explosion and fire caused from electric sparks.

**CAUTION****BEFORE SERVICING**

- Do not sprinkle water onto the washing machine directly when cleaning it.
 - ✓ This may result in electric shock or fire, and may shorten the product lifetime.



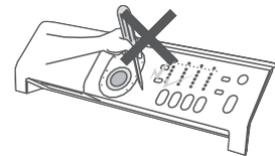
- Do not place any containers with water on the washing machine.
 - ✓ If the water is spilled, it may result in electric shock or fire. This will also shorten the product lifetime.



- Do not install the washing machine in a location exposed to snow or rain.
 - ✓ This may result in electric shock or fire, and shorten the product lifetime.



- Do not press a control button using a sharp tool or object.
 - ✓ This may result in electric shock or damage to the product.

**CAUTION****WHILE SERVICING**

- When wiring a harness, make sure to seal it completely so no liquid can enter.
 - ✓ Make sure that they do not break when force is exerted.
 - Check if there is any residue that shows that liquid entered the electric parts or harnesses.
 - ✓ If any liquid has entered into a part, replace it or completely remove any remaining moisture from it.
 - If you need to place the washing machine on its back for servicing purposes, place a support(s) on the floor and lay it down carefully so its side is on the floor.
 - ✓ Do not lay it down on its front. This may result in the inside tub parts damaging.
-



WARNING

WHILE SERVICING

- Check if the power plug and outlet are damaged, flattened, cut or otherwise degraded.
 - ✓ If faulty, replace it immediately.
 - Failing to do so may result in electric shock or fire.
- Completely remove any dust or foreign material from the housing, wiring and connection parts.
 - ✓ This will prevent a risk of fire due to tracking and electrical hazard.
- When connecting wires, make sure to connect them using the relevant connectors and check that they are completely properly.
 - ✓ If tape is used instead of the connectors, it may cause fire due to tracking.
- Make sure to discharge the PBA power terminals before starting the service.
 - ✓ Failing to do so may result in a high voltage electric shock.
- When replacing the heater, make sure to fasten the nut after ensuring that it is inserted into the bracket-heater.
 - ✓ If not inserted into the bracket-heater, it touches the drum and causes noise and electric leakage.



WARNING

AFTER SERVICING

- Check the wiring.
 - ✓ Ensure that no wire touches a rotating part or a sharpened part of the electrical harness.
- Check for any water leakage.
 - ✓ Perform a test run for the washing machine course and check whether there is any water leakage through the floor section or the pipes.
- Do not allow consumers to repair or service any part of the washing machine themselves.
 - ✓ This may result in personal injury and shorten the product lifetime.

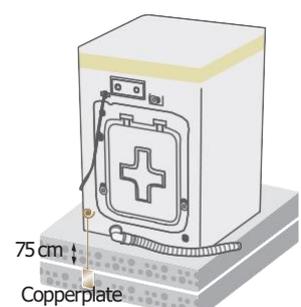
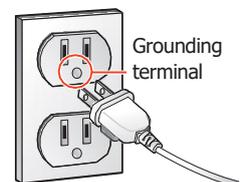


- If it seems that grounding is needed due to water or moisture, make sure to run grounding wires. (Check the grounding of the power outlet, and additionally ground it to a metallic water pipe.)
 - ✓ Failing to do so may result in electric shock due to electric leakage.

[Running a grounding wire]

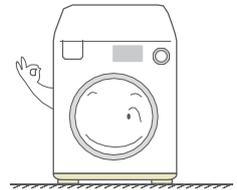
- Twist a grounding wire (copper wire) two or three times around the tap.
- If you connect the grounding wire to a copperplate, bury it 75 cm under the earth in a place with a lot of moisture.

⚠ Do not connect the grounding wire to a gas pipe, plastic water pipe or telephone wire. There is a risk of electric shock or explosion.



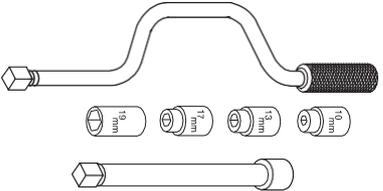
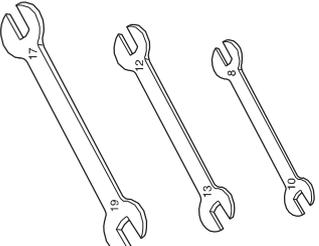
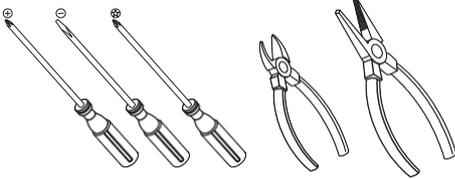
**CAUTION****AFTER SERVICING**

- Check the assembled status of the parts.
 - ✓ Now is a good time to inspect your work. Review all connections and wiring, including mounting hardware.
- Check the insulation resistance.
 - ✓ Disconnect the power cord from the power outlet and measure the insulation resistance between the power plug and the grounding wire of the washing machine. The value must be greater than 10M Ω when measured with a 500V DC Megger.
- Check whether the washing machine is level the floor with respect to the original position of the washing machine prior to service.
By doing this now will reduce for the need of customer dissatisfaction and redo call.
 - ✓ Vibrations can shorten the lifetime of the product.



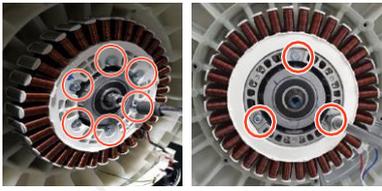
3. DISASSEMBLY AND REASSEMBLY

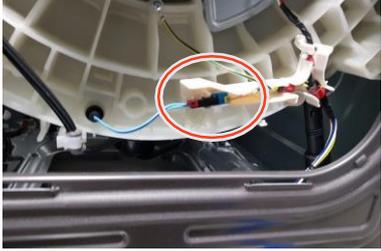
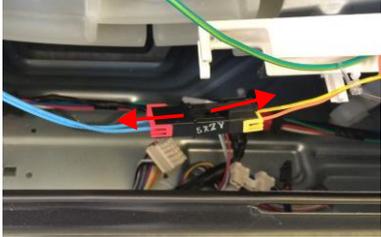
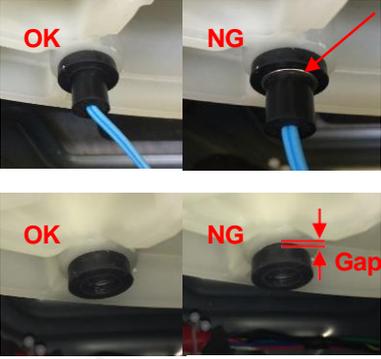
3-1. TOOLS FOR DISASSEMBLY AND REASSEMBLY

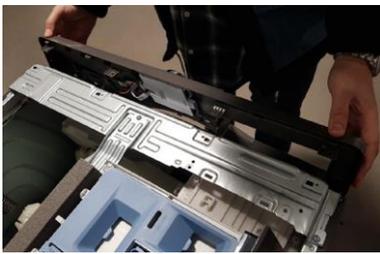
Tool	Type	Remarks
	Socket Wrench with 6" Extension	10mm 13mm 19mm Heater (1) Motor (1), Balance (5), 2 holes of each left and right of the shock absorber 1 Pulley hole
	Open End wrench	10mm 13mm 19mm Replaceable for the box driver. Since the bolt runs idle when the box driver is used, use the box driver 17mm.
	Vice pliers	Tool to protect the idle and abrasion of the bolt for the box driver.
	Others (Driver, Nipper, Long nose)	General tools for the after service.

3-2. STANDARD DISASSEMBLY DRAWINGS

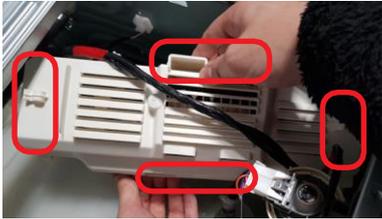
- ▶ This is a standard disassembly diagram and may differ from the actual product.
Use this material as a reference when disassembling and reassembling the product.

Part	Figure	Description
Disassembling and Repairing the Rear Motor		<ol style="list-style-type: none"> 1. Remove the 4 screws holding the Back-Cover at the back of the washing machine and separate the Back-Cover pushing it downwards. (Assemble it by lifting it upwards)
		<ol style="list-style-type: none"> 2. After separating the Back-Cover, remove the M19 nut holding the Motor. To remove it, turn it counter-clockwise. As the Motor also rotates if the nut is turned slowly, torque it quickly and firmly in a single action. Do not remove the nut by inserting a screwdriver into the Motor, as this may result in a problem with the motor.
		<ol style="list-style-type: none"> 3. Remove the M19 nut and washer and then separate the Rotor. Since removing the rotor requires a lot of strength due to the magnetic force of the Rotor and it may come off suddenly, your hand or arm may be injured by the edge of the Stator or Frame. Therefore take precaution when separating it. You can separate the connector by pressing.
		<ol style="list-style-type: none"> 4. Separate the MotorWire while pressing the navel of the Housing.
		<ol style="list-style-type: none"> 5. Separate the 6(or 3)xM10 screws. →Separate the Assy Bracket Motor →Separate the Stator. <input checked="" type="checkbox"/> When removing the last of the 6 screws, hold the Stator as it may fall when the screws are removed.
<ul style="list-style-type: none"> • Check Points for Troubleshooting <ol style="list-style-type: none"> 1. Check if there is any alien substance between the Rotor and the Stator. 2. Check if the motor power (Blue, White, Red) wire is connected <input checked="" type="checkbox"/> The order of the motor wires is Blue, White, and Red from the right. Check if the resistance between Blue-White, White-Red, and Red-Blue is equal to 15Ω. 		

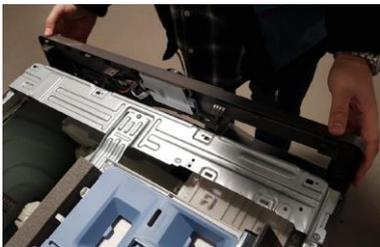
Part	Figure	Description
Disassembling and Repairing the Thermistor		<ol style="list-style-type: none"> 1. Separate the Assy Thermistor and Guide Wire-T while pulling the Assy Thermistor. 2. Separate the Assy Thermistor and Assy Wire Harness while pressing the navel of the Housing.
		<ol style="list-style-type: none"> 3. Pull the Assy Thermistor from Tub Back. When disassembling Assy Thermistor, leave the rubber packing.
Disassembling and Repairing the Thermistor		<ol style="list-style-type: none"> 1. When assembling Assy Thermistor, push to the end. If assembling like NG picture, water leakage possibility is high. 2. When assembling and disassembling Assy Thermistor, rubber Packing should be checked. If the gap existed between rubber packing and tub-back, water leakage possibility is high.
	<p>⚠ CAUTION</p> 	

Part	Figure	Description
Separating the Cover-Top and Panel-Control (Check Sub-PCB)		1. Remove the 2 hexagon screws, which are at the back, fixing the COVER-TOP.
		2. Disassemble the COVER-TOP by sliding it backwards.
		3. Press the Separate button to separate the ASSY DRAWER.
		4. Remove the 3 screws in Assy Housing Drawer, and disassemble Assy Housing Drawer by sliding it backwards.
		5. After remove 4 screws in PANEL-CONTROL, Pull the PANEL-CONTROL towards and then lift it upwards to separate.
		6. Carefully disconnect the wire connectors by hand.

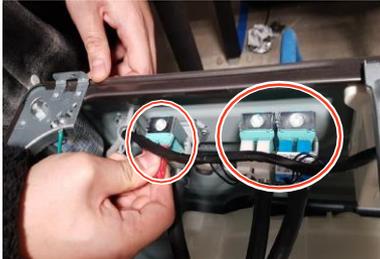
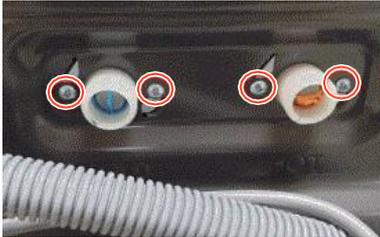
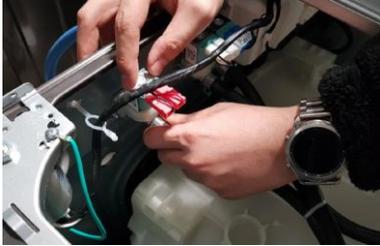
Part	Figure	Description
Separating the Cover-Top and Panel-Control (Check Sub-PCB)		7. Disassemble the ASSY KNOB-ENKODER by pulling it upwards. Knob-PCB can be separate from PANEL-CONTROL.
		8. Disassemble the Cover Panel by hand Sub-PCB was assembled in Cover Panel.

Part	Figure	Description
Separating the Main PCB		<ol style="list-style-type: none"> 1. Remove the 2 screws holding the ASSY PCB-MAIN at the back of the washing machine.
		<ol style="list-style-type: none"> 2. Disassemble 4 Wires and hose from Cover PBA
		<ol style="list-style-type: none"> 3. Separate the 3 Hooks by pushing it rightwards.
		<ol style="list-style-type: none"> 4. Separate the Hooks of Cover PBA.
		<ol style="list-style-type: none"> 5. Disconnect All Connectors on main PBA.

Part	Figure	Description
Disassembling Assy Door		<ol style="list-style-type: none"> 1. Remove the 2 hexagonal screw holding the hinge door.
		<ol style="list-style-type: none"> 2. Disassemble Assy Door by life to upside.

Part	Figure	Description
Disassembling the Frame Front (Check the Door Lock S/W)		1. Remove the 2 hexagon screws, which are at the back, fixing the COVER-TOP.
		2. Disassemble the COVER-TOP by sliding it backwards.
		3. Press the Separate button to separate the ASSY DRAWER.
		4. Remove the 3 screws in Assy Housing Drawer, and disassemble Assy Housing Drawer by sliding it backwards.
		5. After remove 4 screws in PANEL-CONTROL, Pull the PANEL-CONTROL towards and then lift it upwards to separate.
		6. Open Cover Filter and disassemble Hose Drain from hook.

Part	Figure	Description
<p>Disassembling the Frame Front (Check the Door Lock S/W)</p>		<p>7. Disassemble Wire Diaphragm from Diaphragm.</p>
		<p>8. Remove the 3 screw of Door Lock SW.</p>
		<p>9. Remove the 3 screw below of Frame Front.</p>
		<p>10. Remove the 4 screw upside of Frame Front.</p>
		<p>11. Press the UPPER-PLATE slightly with the screwdriver to separate the FRAME-FRONT.</p>

Part	Figure	Description
Disassembling and Repairing the Water Supply Valve		<ol style="list-style-type: none"> 1. Remove the Assy Cover Top. 2. Disconnect the water supply valve wire connector.
		<ol style="list-style-type: none"> 3. Remove the 4 screws holding the water supply valve.
		<ol style="list-style-type: none"> 4. Remove the hose connected to the valves. (Use the plier to remove the hose.)
Disassembling and Repairing the Water Level Sensor		<ol style="list-style-type: none"> 1. Separate the wire connected the SENSOR-PRESSURE. 2. Adjust the plastic clip(of pressure sensor) between two nose of plier, then grip and pull the plastic clip with caution. (Use the long nose plier to push the hook).
		<ol style="list-style-type: none"> 3. Remove the hose from the SENSOR-PRESSURE.
Disassembling the inside Detergent Box		<ul style="list-style-type: none"> • Hold the Hose and Nozzle and disassemble from Diaphragm.

Part	Figure	Description
Disassembling the Pump Motor Part		<ol style="list-style-type: none"> 1. Remove the 2 screws holding the ASSY PUMP DRAIN.
		<ol style="list-style-type: none"> 2. Separate the Clamp of the hose connected to the PUMP and then pull the DRAIN-HOSE. 3. Separate the Clamp of the hose connected to the PUMP and then pull the HOSE-AIR. 4. Separate the Clamp of the hose connected to the PUMP and then pull the HOSE-DRAIN.
		<ol style="list-style-type: none"> 5. Separate the wire connected to the PUMP.
Removing the Remaining Water		<ul style="list-style-type: none"> • If the washing machine works, drain the water in the wash tub by selecting the Spin course. If the washing machine does not work, remove the laundry from the wash tub and scoop the remaining water out of the tub using a cup.

Part	Figure	Description
Disassembling the Tub		<ol style="list-style-type: none"> 1. Remove the 2 screws fixing GUIDE-WIRE, 6 screws fixing FRAME-PLATE(U).
		<ol style="list-style-type: none"> 2. Remove the 6 bolts fixing WEIGHT BALANCER and then pull it towards with caution.
		<ol style="list-style-type: none"> 3. Remove the 4 bolts fixing DAMPER to take ASSY TUB out. 4. Remove all wire and hose connected the ASSY-TUB.
		<ol style="list-style-type: none"> 5. Open the cap of SPRING-HANGER to take ASSY-TUB out.
		<ol style="list-style-type: none"> 6. Lift the ASSY-TUB with two people carefully with holding SPRING-HANGER.

Part	Figure	Description
Disassembling the Tub		<p>7. Remove the M10 bolt from the middle of the TUB and separate the TUB-FRONT and TUB-BACK.</p>
Disassembling the DRUM		<p>1. Separate the ASSY DRUM from TUB, remove 6 M10 bolts from the upper ASSY DRUM, disassemble the ASSY FLANGE SHAFT.</p>
		<p>2. Remove 3 screws from the outer sides and then remove the 3 DRUM-LIFTERS.</p>

Part	Figure	Description
Separating the Heater at the Bottom Front		<ol style="list-style-type: none"> 1. Disassemble the Front-Frame. 2. Separate the connection wire. <ul style="list-style-type: none"> - Separate the Thermostat fixed at the bottom of the Tub. (Take precaution as there may be water remaining.) ☑ Make sure to separate the Thermostat first and then separate the Heater. If you fail to observe this order, it may result in a shock and be damaged. 3. Release the nut holding the Heater with an M10 tool and then separate the Heater. <ul style="list-style-type: none"> ☑ Do not completely release the nut. Pull the Heater forward after releasing the nut. If the Heater is damaged, it may cause a problem. Therefore unfasten the nut using spanner or wrench manually without using pincers or tweezers. ⚠ When you re-assemble the heater, make sure to install the Heater exactly onto the Bracket inside the Tub. If it is not properly installed, it may cause a fire. In addition, completely insert the packing part into the Tub when assembling it so that the packing part is completely attached onto the Tub.
		<ul style="list-style-type: none"> • Check Points for Troubleshooting 1. Check if the resistance of the Heater is equal to 27.1Ω (for the 1900W product), or 26.2Ω (for the 2000W product). 2. Check if the resistance of the Thermistor is equal to 12kΩ (at room temperature).

☑ Reassembly is in the reverse order of the removal.

4. TROUBLESHOOTING

4-1. ERROR MODES

► This is a washer integrated error mode. For detailed information, refer to the general repair scripts.

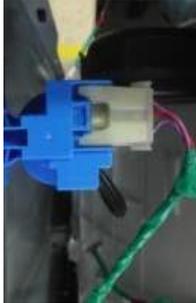
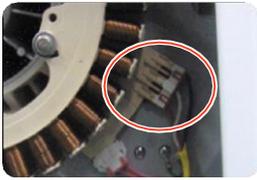
ErrorType	ForUSA	Causes	Remarks
WaterLevel Sensor	1C	<ul style="list-style-type: none"> - The part of the hose where the water level sensor is located is damaged (punctured). - The hose is clogged with foreign material. - The hose is folded. - Too much lubricant has been applied to the insertion part of the air hose. - Hose engagement error. (disengaged) - Part fault. (Faulty internal soldering) - The water level sensor terminal is disengaged. - Main PBA fault. 	
Motor Driving Error and Hall Sensor Error	3C	<ul style="list-style-type: none"> - The PBA connector terminal is not connected. - The motor spin net is not engaged. - The motor's internal coil is damaged. (short-circuited or cut) - The hall sensor terminal is not connected. - Foreign material (a screw) has entered the motor. - Motor overloaded due to too much laundry. (Non-sensing) - The motor hall sensor terminal is not connected. - PBA fault. - The motor driving error from the PBA is weak. Unstable relay operation, etc. - This occurs due to erroneous operating signals from the motor hall sensor. - The IPM terminal of the main PBA is not connected. - The DD motor cover is out of place. - The PCB housing terminal is not connected. - PBA fault. - DD motor fault. 	<p>This error occurs because of restrained revolutions.</p> <p>This error occurs when an interference is generated due to too much laundry, etc.</p>
Water Supply Error	4C	<ul style="list-style-type: none"> - Foreign material is entering the water supply valve. - The water supply valve terminal is not connected. (Wire disconnected) - The warm water and rinse connectors are wrongly connected to each other. - This occurs if the PCB terminal from the drain hose to the detergent drawer is not connected. Check whether the transparent hose is folded or torn. 	
	4C2	<ul style="list-style-type: none"> - The cold and warm water supply hoses are wrongly engaged into each other. - The water temperature is sensed as higher than 50 °C in the Wool or Lingerie courses. 	
Drain Error	5C	<ul style="list-style-type: none"> - The pump motor impeller is damaged internally. - The wrong voltage is supplied to the parts. - Part fault. - This occurs due to freezing in the winter season. - The drain hose is clogged. (Injection error, foreign material) - Clogged with foreign material. - The water pump terminal is not connected: rubber band, bills, cotton, hair pins, coins have collected inside the drain pump ASSY. 	
PowerError	9C1,9C2	<ul style="list-style-type: none"> - Check the consumer's power conditions. <ul style="list-style-type: none"> : Make sure to check the operating voltage. Connect a tester to the internal power terminals during the Boil operations and observe the washing machine's operation carefully. : Check the voltages. (An error occurs when under or over voltage is supplied.) : Check whether a plug receptacle is used. When the connecting wire is 1m, a momentary low voltage may drop up to 10V - Main PBA fault (sometimes) 	

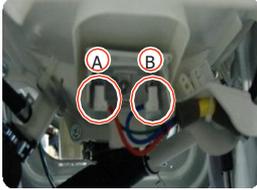
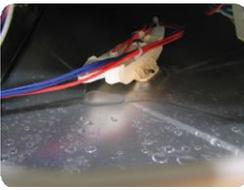
ErrorType	ForUSA	Causes	Remarks
Communication Error	AC	<ul style="list-style-type: none"> - The signals between the sub and main PBAs are not sensed because of communication error. - Check the connector connections between the sub and main PBAs carefully. →Check for incorrect or loose connections, etc. - Remove the sub PBA C/Panel and check for any faulty soldering. 	
	AC3	<ul style="list-style-type: none"> - The signals between The DR Module and main PBAs are not sensed because of communication error. - Check The connector connections between The DR Module and main PBAs carefully. →Check for incorrect or loose connections, etc. - Remove The DR Module and Check for any faulty soldering. 	
	AC4	<ul style="list-style-type: none"> - The signals between The WIFI Module and main PBAs are not sensed because of communication error. - Check The connector connections between The WIFI Module and main PBAs carefully. →Check for incorrect or loose connections, etc. - Remove the WIFI Module and Check for any faulty soldering. 	
	AC5	<ul style="list-style-type: none"> - The signals between The LCD Module and main PBAs are not sensed because of communication error. - Check The connector connections between The LCD Module and main PBAs carefully. →Check for incorrect or loose connections, etc. - Remove The LCD Module and Check for any faulty soldering. 	
	AC6	<ul style="list-style-type: none"> - The signals between the Inverter PBA and main PBA are not sensed because of communication error. - Check The connector connections between the Inverter PBA and main PBA carefully. →Check for incorrect or loose connections, etc. - Remove the Inverter PBA and Check for any faulty soldering. 	
Switch Error (Main Relay Error)	BC2	<ul style="list-style-type: none"> - A switch is jammed or stuck due to be pressed unevenly due to deformation of the control panel or button. - This error may occur when the screws that hold the sub PBA in place are tightened too much. - A button other than the Power button is continually pressed. (for more than 30 seconds). - Deformation of an internal plastic injection part. - A screw for assembling the sub PBA is tightened too much. 	
DoorError	DC	<ul style="list-style-type: none"> - A switch contact error because of a deformation of the door hook. - When the door is pulled by force. 	When the door is not opened after the door open operation.
		<ul style="list-style-type: none"> - This occurs in the Boil wash because the door is pushed due to a pressure difference from internal temperature changes. 	When the door is not locked after the door close operation.
	DC1	<ul style="list-style-type: none"> - The door lock switch terminal is connected incorrectly. - The doorlock switch terminal is broken. - This occurs intermittently because of an electric wire leakage - Main PCB fault. 	
HeaterError	HC,HC1	<ul style="list-style-type: none"> - The washing heater is short-circuited or has a wire disconnected. - The washing heater in the tub has an error. (Contact error, temperature sensor fault) - If the water level sensor operates without water because water is frozen or for any other reason and the temperature sensor engaged at the bottom to prevent overheating for the washing heater detects a temperature of 100 to 150 °C, the washing machine turns the input power off. 	If the heater has no error, this occurs because of a PBA relay malfunction.

ErrorType	ForUSA	Causes	Remarks
Water Leakage Error	LC	<ul style="list-style-type: none"> - Heater engagement fault. (out of place) - The air hose is out of place and water leakage occurs during the spin cycle. - The tub back at the safety bolts fixing part is broken. - Water leakage occurs at the front with foaming because of too much detergent. - Water leakage occurs because the connecting hose to the detergent drawer is connected incorrectly. - The drain pump filter cover is engaged incorrectly. - Water leakage occurs at the drain hose. - The duct condensing holding screws are worn. - The nozzle-diaphragm is engaged in the opposite direction or the rubber packaging is omitted. - Water leakage occurs because the screws that hold the tub back and front in place are fastened incorrectly. - The leakage sensor is faulty. 	
Overflow Error	OC	<ul style="list-style-type: none"> - Water is supplied continually because the water level detection does not work. - Because the drain hose is clogged and there is an injection error (at a narrow section), the water level detection does not work and water is supplied continually. - Water is supplied continually because of freezing or because there is foreign material in the water supply valve. - This error may occur when the water level sensor is degraded. 	This error occurs because the water level sensor terminal is out of place.
Temperature Sensor Error	TC1	<ul style="list-style-type: none"> - The washing heater sensor in the tub has an error. (Contact error or temperature sensor fault) - The connector is connected incorrectly or is disconnected. - If the water level sensor operates without water because the water is frozen or for any other reason and the temperature sensor engaged at the bottom to prevent overheating for the washing heater detects a temperature of 100 to 150 °C, the washing machine turns the input power off. 	Heater sensor fault : When the connector is connected incorrectly or has a wire disconnected or contact error
Unbalance Error	UB	<ul style="list-style-type: none"> - As laundry causes this error, check the laundry. - Find the reason for the unbalance and solve it as directed in the user manual. 	
Foaming Detected	SUD	<ul style="list-style-type: none"> - This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds. - "Sud" or "SUDS" is displayed when too much foaming is detected and "End" is displayed when the removal of the foaming is finished. (This is one of the normal operations. It is an error for preventing non-sensing faults.) 	
Mems PBA Error Detected	8C1	<ul style="list-style-type: none"> - Error detected in the Mems PBA or data error detected. Check the wire connections. 	
	8C2	<ul style="list-style-type: none"> - Replace if necessary. 	
	8C	<ul style="list-style-type: none"> 1. Check the wire connections. 2. Replace the Mems PBA. 	
System Error	SF	<ul style="list-style-type: none"> - Micro Controller Operation Fail. 	Replace Assy PCB.
Vibration noise during SPIN cycle of small amount of clothes. Small load example: 1 bath towel, 1 jeans, etc. (* WF45R6100/6300_01 VER_US MODEL ONLY)		<ul style="list-style-type: none"> - Unbalanced due to small load. →Increase washing time and excessive vibration / noise in maximum rpm section. 	Replace PBA with spin algorithm updated. (* WF45R6100/6300_01 VER_US MODEL ONLY)

4-3. CORRECTIVE ACTIONS FOR EACH ERROR CODE

► These are common troubleshooting procedures for each drum-type washer error mode. For detailed information, refer to the general repair scripts.

ErrorType	Error Mode	Causes	CorrectiveActions	Description of Photo
Water Level Sensor	1C	<ul style="list-style-type: none"> Water level sensor fault Incorrect connections of the water level sensor terminal The hose part for the water level sensor is folded. Main PCB fault 	<p>Check the water level sensor terminal connections and contacts.</p> <p>An error occurs if an incorrect water level sensor is used. Make sure to check the material code. (Abnormal operation)</p> <p>If the water level sensor is faulty, replace it.</p> <p>If the error persists despite taking the action above, replace the PBA.</p>	 <p>Check the water level sensor frequency.</p> <ul style="list-style-type: none"> Check it after the water level sensor and the connector are connected. ☑ Checking Part : Pink Color Wire Orange Color Wire. Frequency : Approx. 25.5 KHz with no load
Washing Motor Error and Hall Sensor Error	3C	<ul style="list-style-type: none"> Washing motor fault Washing motor hall sensor fault Incorrect connections of the washing motor/hall sensor connector Washing motor rotor and stator fault Main PCB fault 	<p>Check the motor connector terminal connections and contacts.</p> <p>3E is displayed because overloading occurs due to too much laundry.</p> <p>If the hall sensor terminal is faulty, replace the hall sensor.</p> <p>Check whether the stator of the motor cover is damaged.</p> <p>Check for coil disconnections due to foreign material.</p> <p>If the PBA control circuit is faulty, replace the PBA.</p>	 <p>► Check the motor Winding Coil</p> <p>Plug out the connector and read resistances at any two of the three terminals on Motor : Should be 6.0 Ω (at 25°C)</p>
				 <p>► Check the motor Hall Sensor</p> <p>Check the resistance on the main PCB motor (Between pins 1 and 3, and 1 and 4 of the four (4) pins)</p> <ul style="list-style-type: none"> Resistance : Approx. 2 to 4 MΩ Check the voltage when the power is on.
Communication Error	AC	<ul style="list-style-type: none"> The signals between the sub and main PBAs are not sensed. Incorrect wire connections between the sub and main PBAs. 	<p>Check the wire connections and terminal contacts between the sub and main PBAs.</p> <p>Check for disconnected wires.</p> <p>Check whether the sub PBA is short-circuited because of moisture.</p> <p>If the main PBA's communication circuit is faulty, replace it.</p>	-
Door Error	DC	<ul style="list-style-type: none"> Door switch fault Main PCB fault 	<p>If a dS error occurs, check whether it occurs during the Boil cycle.</p> <ul style="list-style-type: none"> If it is detected that the door is open, close the door. <p>The 120V is directly connected to the door.</p> <p>Check and repair the power wire connections and insulation state.</p> <p>Check the door switch. Replace if faulty.</p>	 <p>► TYPE 1</p> <p>Check the door switch Resistance.</p> <p>The resistance of 1 and 3 Pin Must be approximately 175Ω</p>
	DC1		<p>Check the main PBA door sensing circuit. Replace if faulty.</p>	

Error Type	Error Mode	Causes	Corrective Actions	Description of Photo
DOOR	DDC DC3	<ul style="list-style-type: none"> Main PCB fault Bending connector 	<p>DDC means add door is opened Close the add door.</p> <p>Check add door switch, Barrier, Lock module's movement is operate normally. check Open detection switch and Barrier's Lock pillars coming down while pressing in operation normally.</p> <p>Main PBA door detection circuit is fault or connector combination. Replace or repair if faulty.</p>	 <p>Check resistance values normally displayed when you press the door switch button.</p>
				 <p>Check door lock motor resistance. (1-2 pin 46.57±15Ω) Lock stroke check normal detection on protrusion status. (3-4/3-5 pin check resistance value displayed normally).</p>
Heater Error	HC,HC1	<ul style="list-style-type: none"> Disconnection wire Heater falut Wash-thermistor fault 	<p>Check for connection between wire and heater.</p> <p>If wash heater is faulty, replace it. - Refer the TYPE1</p> <p>If it is not problem in heater, replace wash-thermistor - Refer the TYPE2</p>	 <p>[FRONT]</p> <p>▶ TYPE1 Check the resistance between A and B. It should be 16.05±0.65Ω.</p>
				 <p>[BACK]</p> <p>▶ TYPE2 If TYPE1 is OK, Change a wash-thermistor at back of Tub.</p>
Water Leakage Error	LC	<ul style="list-style-type: none"> Check for any leakage. Foreign material in the DV case Fault of a hose or incorrect part engagement in the product 	<p>Check for any leakage on the base, Hose, Valve and Tub connections and take any required action.</p> <p>During natural draining, this error occurs because the drain bellows are dogged with foreign material. Remove the foreign material.</p> <p>Check the drain motor operation. Replace if it does not operate normally.</p>	 <p>▶ DRAIN PUMPTYPE (Automatic Drainage) Check whether there is any foreign material in the bellows. ☑ Check for any foreign material, such as underwear wires or coins.</p>
				
				 <p>▶ PUMPTYPE Check for any leakage on the base, Hose, Valve and Tub connections.</p>

Error Type	Error Mode	Causes	Corrective Actions	Description of Photo	
Overflow Error	OC	<ul style="list-style-type: none"> Water level sensor fault Freezing in the winter season 	<p>If the water level sensor has a functional error, replace it.</p> <p>Check the hose. This error occurs if it is torn or has a hole.</p> <p>This error occurs if water is frozen in the winter season. Use hair dryer to defrost hose. Consider relocating the unit to warmer location.</p>		<p>Check the hose connected to the water level sensor.</p> <p>☑ Check whether the hose is folded, cut, or damaged.</p>
Temperature Sensor Error	TC1	<ul style="list-style-type: none"> Washing temperature sensor fault Dry temperature sensor fault Faulty and incorrect connections of the dry condensing sensor Main PCB fault Freezing in the winter season 	<p>Check the connections for the washing heater temperature sensor connector.</p> <p>If the washing heater temperature sensor has a functional error, replace it.</p> <p>- A tE error occurs.</p> <p>Check the connections for the dry heater temperature sensor connector.</p> <p>If the dry heater temperature sensor has a functional error, replace it.</p> <p>Check the connections for the duct condensing temperature sensor connector.</p> <p>If the duct condensing temperature sensor has a functional error, replace it.</p>	-	-
Unbalance Error	UV	<ul style="list-style-type: none"> Motor hall sensor fault Caused by the laundry contents 	<p>Check the type of laundry. Check whether they may cause an unbalanced situation.</p> <p>- Educate the consumer in this case is to press pause reposition the load or remove a few items. Press start to continue and complete the wash cycle.</p>	-	-